




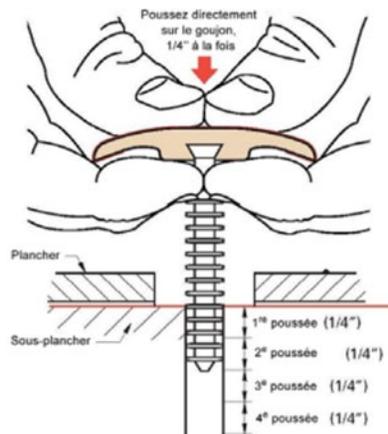


- Using both hands, start at one end and gently push moulding 1/4" (6.4 mm) down. Make sure dowel is straight and that you apply pressure directly over dowel. The best position is to hold dowel with pointer and middle fingers and push down with thumbs. Moving down the moulding again, push the dowels in the floor 1/4" (6.4 mm) at a time. Repeat twice.

NOTE: Do not try to push the entire moulding in all at once by just pressing it in from top! This will bend the dowels.



- Once moulding is half way in, insert the tip of a glue gun under 1 edge of the moulding. Apply Liquid Nails or any polyurethane constructive adhesive along 1 side of the flooring.

NOTE: Make sure you apply adhesive to ONLY 1 side of the moulding and that all surfaces that the adhesive touches is dust and debris free.

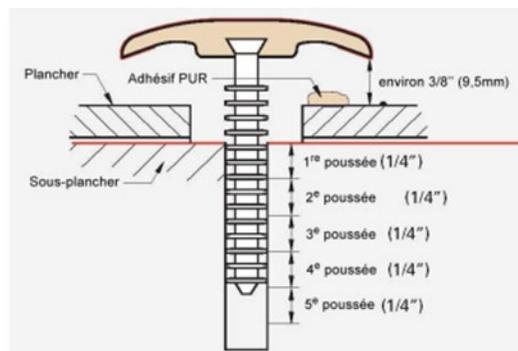

- When finished applying adhesive, start again at the beginning of the moulding and push dowels 1/4" (6.4 mm) at a time until moulding is secure. Once moulding is in place, use a rubber mallet to tap on the top of each dowel. Use the pencil marks to reference where each dowel is located.

